

How to enter Dual BIOS utility?

GBT has moved the Dual BIOS and Q-Flash utility hot key from boot up screen to BIOS setup menu. The following are instructions on how to enter into Dual BIOS and Q-Flash utility.

For AMI BIOS

Step1: Press “Del” key to enter BIOS setup while system boots.

AMIBIOS SIMPLE SETUP UTILITY - VERSION 1.24e (C) 1999 American Megatrends, Inc. All Rights Reserved	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWER MANAGEMENT SETUP	USER PASSWORD
PNP / PCI CONFIGURATION	IDE HDD AUTO DETECTION
LOAD FAIL-SAFE DEFAULTS	SAVE & EXIT SETUP
LOAD OPTIMIZED DEFAULTS	EXIT WITHOUT SAVING
ESC: Quit hifg : Select Item (Shift)F2 : Change Color F5: Old Values	
F6: Load Fail-Safe Defaults F7: Load Optimized Defaults F8:Flash Utility F10:Save & Exit	
Time, Date , Hard Disk Type	

Step 2: Press “F8” to enter Dual BIOS setup.

AMIBIOS SIMPLE SETUP UTILITY - VERSION 1.24e (C) 1999 American Megatrends, Inc. All Rights Reserved	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP
CHIPSET FEATU	ENTER BIOS FLASH UTILITY (Y/N) ? Y
POWER MANAC	
PNP / PCI CONF	
LOAD FAIL-SAFE DEFAULTS	SAVE & EXIT SETUP
LOAD OPTIMIZED DEFAULTS	EXIT WITHOUT SAVING
ESC: Quit hifg : Select Item (Shift)F2 : Change Color F5: Old Values	
F6: Load Fail-Safe Defaults F7: Load Optimized Defaults F8:Flash Utility F10:Save & Exit	
Time, Date , Hard Disk Type	

Step 3:Following is Dual BIOS Q-Flash utility screen shoot.

AMI Dual BIOS Flash ROM Programming Utility	
Boot From.....	Main BIOS
Main ROM Type.....	SST 39SF020
Backup ROM Type.....	SST 39SF020
Wide Range Protection Disable	
Boot From Main BIOS	
Auto Recovery Enable	
Halt On Error Disable	
Copy Main ROM Data to Backup	
Load Default Settings	
Save Settings to CMOS	
<hr/>	
PgDn/PgUp:Modify(Enter:Run)	↑↓:Move
ESC:Reset	F10:Power Off